


Tube Adapter

For installing single metal sheath thermocouple to connector. Mounts to underside of connector for ease of wiring connections. 2 screws provided for easy attachment to thermocouples.


Ordering Code	Fits Sheath O.D.
TA062	1/16"
TA125	1/8"
TA188	3/16"
TA250	1/4"
TA313	5/16"
TA375	3/8"

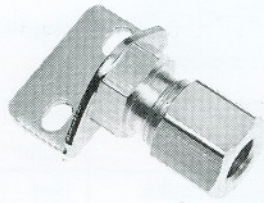

Brass Insert

Used to crimp or braze sheath type thermocouple for installation into connector cavity. Fits sheath sizes up to 1/4". Attaches directly to sheath by crimping or brazing.


Ordering Code	Fits sheath O.D.
BC062	1/16"
BC125	1/8"
BC188	3/16"
BC250	1/4"

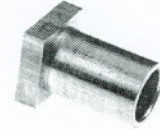

Dual Compression Tube Adapter

For installing dual metal sheath thermocouple to connectors. Permits use of parallel or diagonal sheath wiring. Accepts 2 standard or high temperature connectors.


Ordering Code	Fits Sheath O.D.
DTA062	1/16"
DTA125	1/8"
DTA188	3/16"
DTA250	1/4"

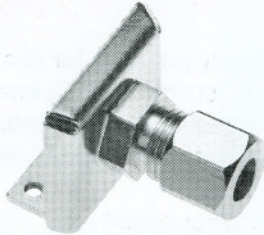

Wire Clamp Bracket

Rugged bracket for strain relieving insulated wires. Easily installed after wires are attached to connector.

Ordering Code
WC

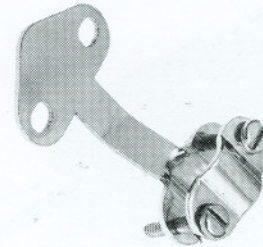

Weather Proof Jackets

Neoprene rubber jackets add moisture protection to connection. Two per assembly.

Ordering Code
WPJ



Rubber Bushing

Installed into insert indentation of connector. Provides strain relief for thermocouple wire.

Ordering Code
RB

